



TARE + GROSS -WEIGHING –INSTRUCTIONS

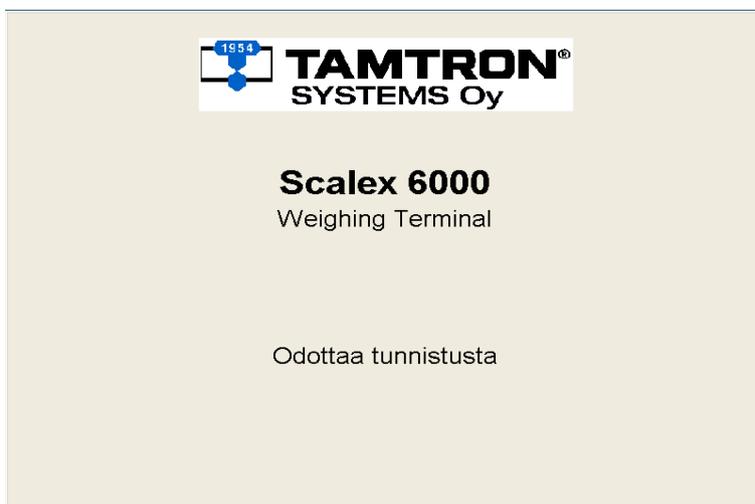

Terminal display when the boom is closed and there is no truck on the weighbridge.

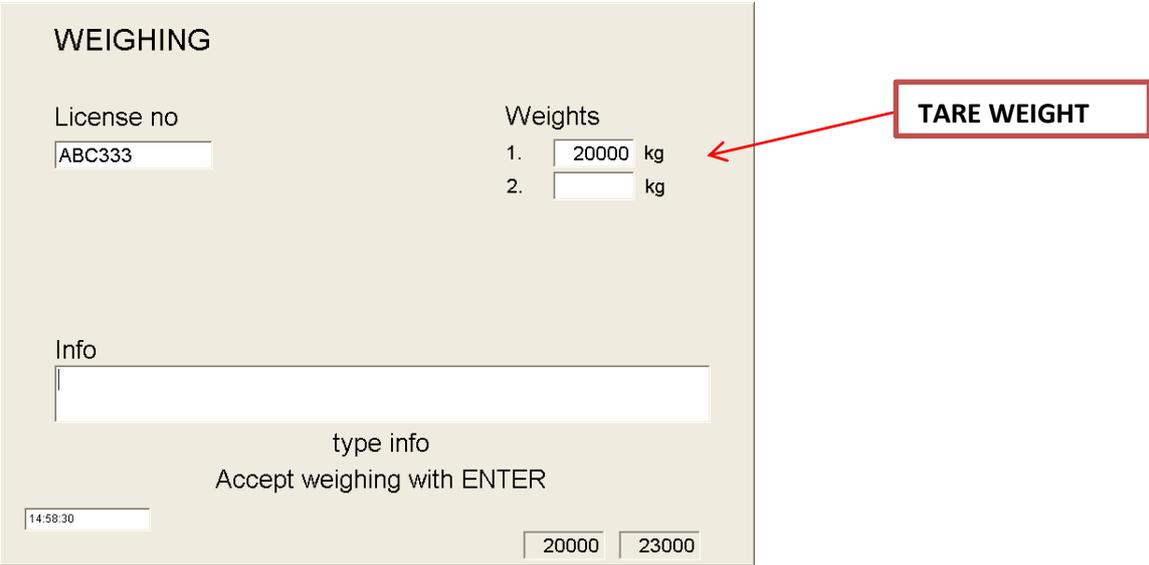

WEIGHING

License no
ABC333

Weights
1. 20000 kg
2. kg

Info
type info
Accept weighing with ENTER


14:58:30

20000 23000

TARE WEIGHT

1. Tare weighing

When the vehicle has been identified, the registration number will be displayed, and the driver can see the real-time *tare* weight of the vehicle at the right upper edge of the display. The driver can type additional information in the blank field by using the keys, and accept the weighing by pressing ENTER, and the device will print out a weighing receipt. The receipt can be reprinted by pressing the key “P”.

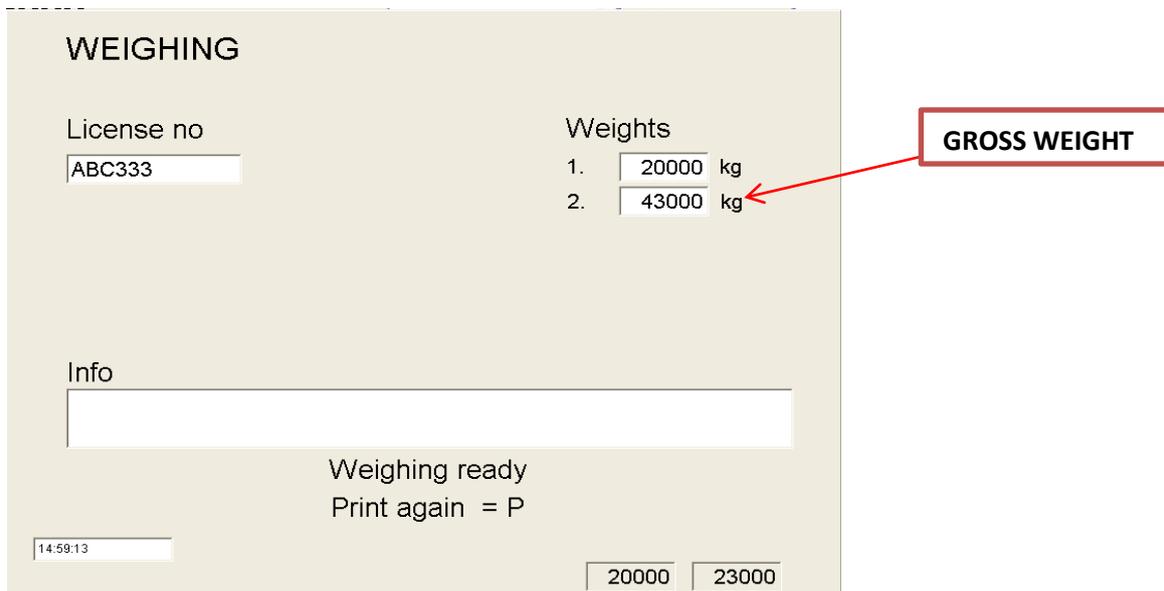

WEIGHING

License no
ABC333

Weights
1. 20000 kg
2. 43000 kg

Info

Weighing ready
Print again = P

14:59:13

20000 23000

2. Gross-weighing

When the vehicle has been identified, the registration number will be displayed, and the driver can see the real-time *gross* weight of the vehicle at the right upper edge of the display. The driver can type additional information in the blank field by using the keys, and accept the weighing by pressing ENTER, and the device will print out a weighing receipt. Now the receipt includes both- tare and the gross weight. The receipt can be reprinted by pressing the key "P".

If you have problems with printing the receipt, contact the Gate Control Room:

05-2605081