

Terminal display when the boom is closed and there is no truck on the weighing device:



TARE WEIGHING

When the vehicle has been identified, the registration number will be displayed, and the driver can see the real-time tare weight of the vehicle on the display. If necessary, the driver can enter additional information on the truck using the touchpad of the screen. The additional information can be typed in field "Info". Finally, the driver accepts the weighing by pressing the weighing icon on the touchscreen, whereby the device prints out the ticket.



GROSS WEIGHING

When the vehicle has been identified, the registration number will be displayed, and the driver can see the real-time total weight and tare weight of the vehicle on the display. If necessary, the driver can enter additional information on the truck using the touchpad of the screen. The additional information can be typed in field "Info". Finally, the driver accepts the weighing by pressing the weighing icon on the touchscreen, whereby the device prints out the ticket.

The screenshot shows a weighing interface with the following elements:

- WEIGHING** (Title)
- License no**: ZZZ-333
- Weights**:
 - 1. 31000 kg
 - 2. 42000 kg
- Info**: A text input field.
- Weighing ready**: A yellow bar indicating the weighing process is complete.
- Print again**: A button with a printer icon.
- Footer**: 16:51:17, 21000, 21000

A red arrow points from a red-bordered box labeled **TOTAL WEIGHT** to the second weight value (42000 kg).

If you have problems with printing the ticket, contact the Gate Control Room:
05 2605081.